





Import Plans and images for estimating in Precision Plan Pro.

Importing Plans.

The plan used in this walkthrough has been included in the 'Takeoff Demo folder.zip', titled 'p3-plansetbeg-psb.PDF'. Import this file if you do not have another plan set or would like to follow along.

- 1) Pressing the "import takeoff overlay" button  will bring up a dialog box. Choose the location of the file, Select Open. P3 currently supports: PDF, DXF, JPG, PNG, GIF, and BMP.

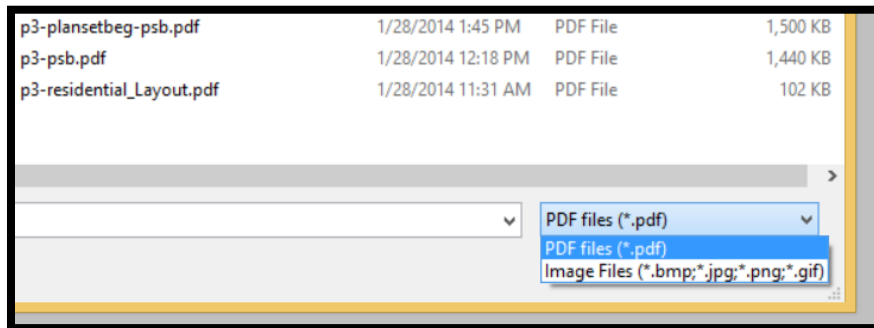

- 2) Typically a user would have a multiple paged PDF for plans, the Import preview window is great for choosing a particular page to import. In this case, we will be using a two page PDF. Holding 'Ctrl + scrolling with mouse wheel' while in the import window will allow you to zoom in/out to better see the pages.
- 3) Once you have navigated to the desired Page, click IMPORT
- 4) You can now move the page around freely in the drawing area. Clicking the left mouse button will place the page at the point of the cursor.